



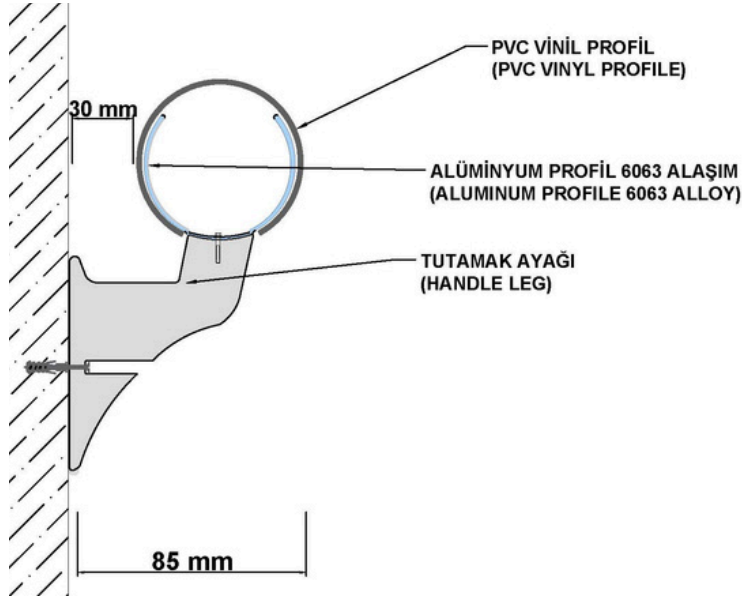


This installation instruction is applicable to :
KP 50 Wall Protection Handrail

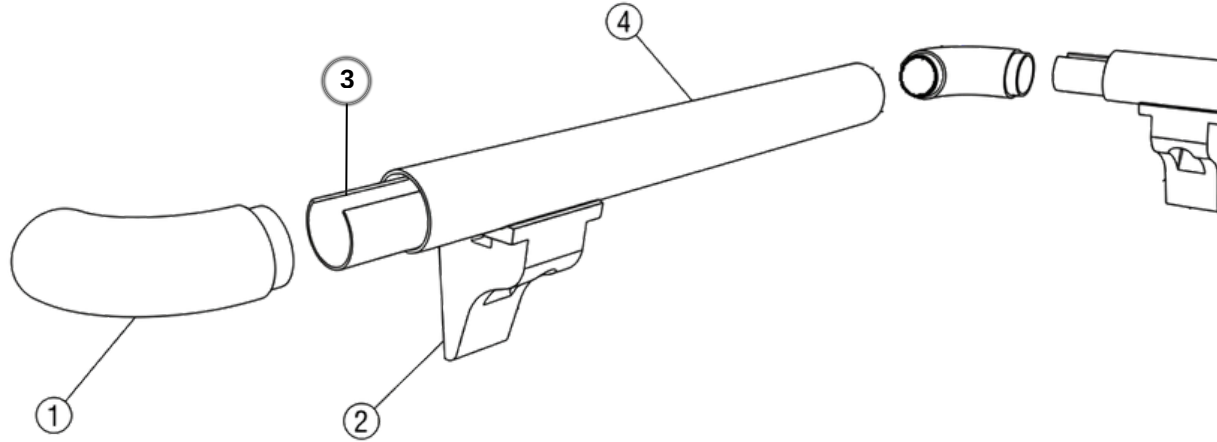

Component Part Numbers:

- 1: Left/ Right End Cap
- 2: Mounting Bracket
- 3: Aluminum Profile (6063 Alloy)
- 4: Pvc Vinyl Profile (Snap-on cover)



KP 50 WALL PROTECTION HANDRIAL INSTALLATION INSTRUCTIONS

Step 1 : Mark the Wall: Find the correct height for your handrail and mark a level line below it (as specified in the diagrams) to show where the mounting brackets go.

Step 2 : Cut the Metal Base: Cut the aluminum retainer (the metal base) to the correct length, following the specific diagrams for any corners or turns..

Step 3 : Lay the metal base flat and drill holes in it for the wall brackets, making sure to follow the recommended spacing rules.

Step 4 : Use the drilled metal base as a guide (a template) against the wall to drill matching holes into your wall.

Step 5 : Push the molded end pieces (like caps or turns) onto the ends of the metal base and drill the holes needed to secure them.

Step 6 : Use the provided screws, flat washers, and nuts to firmly attach the end pieces. Only use flat washers, not lock washers. Tighten them carefully, but do not overtighten.

Step 7 : Using the correct hardware for your type of wall (e.g., drywall anchors), secure the entire bracket assembly to the wall, then fully tighten all screws on the brackets.

Step 8 : For long rails, join the metal bases together (splice them), keeping the joint at least 4 inches away from any wall bracket.

Step 9 : Measure the exact distance between your end pieces and cut the vinyl cover piece(s) to this length.

Step 9 : Press the cut vinyl cover onto the metal base until it snaps securely in place.